INSTALLATION AND USER GUIDE FOR 20/40/60-MINUTE PUSH-BUTTON TIMER

VENMAR NO. 03364 AND VÄNEE NO. 03701


READ AND SAVE THESE INSTRUCTIONS

The illustrations in this document are generic; your push button appearance may be slightly different from the ones shown.

A WARNING

Always disconnect the unit before making any connections. Failure in disconnecting power could result in electric shock or damage of the wall control or electronic module inside the unit.

- Unplug the ventilation unit.
- Cut a 2³/8" x 1³/8" hole in a wall, at a convenient location for the push button. Route a cable (type 22/4) for the push-button from the unit to this hole. See figure at right.

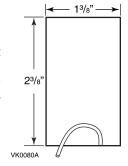


- Temporarily place the push button over the hole and mark both mounting screw hole positions.
- Remove the push button, drill both screw holes (3/16" Ø) in wall and insert the wall anchors (included).



- **5** Strip the end of the cable to access the wires.
 - NOTE: Although this is a 4-wire cable, only 3 of them will be used for connection.

Strip the end of 3 wires. Connect wires to the terminals, regardless of the wire color: one wire to "OL", another one to "OC" and a last one to "I". **Note which wire color has been chosen for each terminal**. See illustration below.

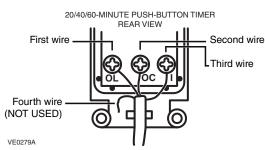


6 Mount the push button to the wall.




Perform the electrical connection to the terminal connector of the unit, as shown below. For more details, refer to the installation manual of the ventilation unit.

NOTE: To avoid miswiring, refer to the notes about the color of the wires taken on step **5**.

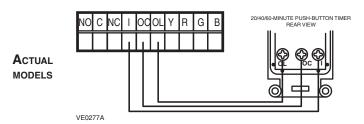


EARLIER MODELS

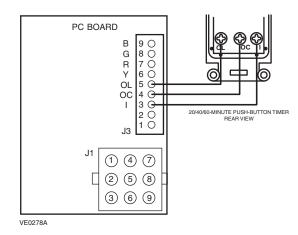

Plug the ventilation unit and test the push button.

High speed activation times are in multiples of 20 minutes.

- Within two seconds, push once for 20-minute, twice for 40-minute, or three times for 60-minute activation. Indicator then lights up and the system exchanges air at high speed.
- Every five seconds, the indicator light flashes once to indicate a 20-minute selection, twice for a 40-minute and three times for a 60-minute selection.
- Push once more to stop activation.
 Unit then returns to its to previous setting.

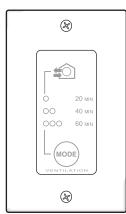

VC0136