
INSTALLATION INSTRUCTIONS



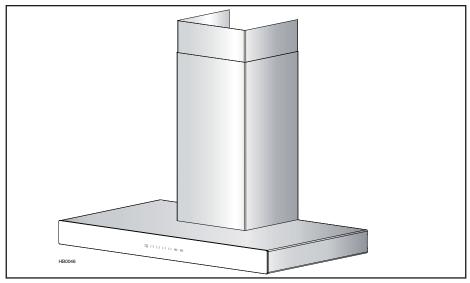

CC700 SERIES

⚠INTENDED FOR DOMESTIC COOKING ONLY

READ AND SAVE THESE INSTRUCTIONS

INSTALLER: LEAVE THIS MANUAL WITH HOMEOWNER. HOMEOWNER: USE AND CARE INFORMATION ON PAGES 19 TO 20.

Venmar Ventilation Inc., 550 Lemire Blvd., Drummondville QC J2C 7W9 1-800-567-3855

REGISTER YOUR PRODUCT ON LINE AT: www.bnv.ca

For additional information, visit www.venmar.ca or www.ispira.ca



⚠ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK OR INJURY TO PERSONS, OBSERVE THE FOLLOWING:

- Use this unit only in the manner intended by the manufacturer. If you have questions, contact the manufacturer at the address or telephone number listed in the warranty.
- 2. Before servicing or cleaning unit, switch power off at service panel and lock service disconnecting means to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.
- Installation work and electrical wiring must be done by qualified personnel in accordance with all applicable codes and standards, including fire-rated construction codes and standards.
- 4. Sufficient air is needed for proper combustion and exhausting of gases through the flue (chimney) of fuel burning equipment to prevent backdrafting. Follow the heating equipment manufacturer's guidelines and safety standards such as those published by the National Fire Protection Association (NFPA), and the American Society for Heating, Refrigeration and Air Conditioning Engineers (ASHRAE), and the local code authorities.
- When cutting or drilling into wall or ceiling, do not damage electrical wiring and other hidden utilities.
- 6. Ducted fans must always be vented to the outdoors.
- Do not use this unit with any additional solid-state speed control device.
- 8. To reduce the risk of fire, use only metal ductwork.
- This unit must be grounded. To provide protection against electric shock, connect to properly grounded outlets only.
- 10. All tempered glass can experience spontaneous breakage. If broken, tempered glass falls out of it's opening in interlocking clumps. Tempered glass can, on occasion, break into large shards rather than the classic tiny piece pattern.
- 11. When applicable local regulations comprise more restrictive installation and/or certification requirements, the aforementioned requirements prevail on those of this document and the installer agrees to conform to these at his own expenses.

TO REDUCE THE RISK OF A RANGE TOP GREASE FIRE:

- a) Never leave surface units unattended at high settings. Boilovers cause smoking and greasy spillovers that may ignite. Heat oils slowly on low or medium settings.
- Always turn hood ON when cooking at high heat or when flambeing food (i.e.: Crêpes Suzette, Cherries Jubilee, Peppercorn Beef Flambé).
- c) Clean ventilating fans frequently. Grease should not be allowed to accumulate on fans, filters or exhaust ducts.
- d) Use proper pan size. Always use cookware appropriate for the size of the surface element.

TO REDUCE THE RISK OF INJURY TO PERSONS IN THE EVENT OF A RANGE TOP GREASE FIRE, OBSERVE THE FOLLOWING*:

- SMOTHER FLAMES with a close-fitting lid, cookie sheet or metal tray, then turn off the burner. BE CAREFUL TO PREVENT BURNS. IF THE FLAMES DO NOT GO OUT IMMEDIATELY, EVACUATE AND CALL THE FIRE DEPARTMENT.
- NEVER PICK UP A FLAMING PAN You may be burned.
- DO NOT USE WATER, including wet dishcloths or towels – This could cause a violent steam explosion.
- 4. Use an extinguisher ONLY if:
 - A. You own a Class ABC extinguisher and you know how to operate it.
 - B. The fire is small and contained in the area where it started.
 - C. The fire department has been called.
 - **D.** You can fight the fire with your back to an exit.

*Based on "Kitchen Fire Safety Tips" published by NFPA.

CAUTION

- 1. For indoor use only.
- For general ventilating use only. Do not use to exhaust hazardous or explosive materials and vapors.
- To avoid motor bearing damage and noisy and/or unbalanced impeller, keep drywall spray, construction dust, etc. off power unit.
- 4. Your hood motor has a thermal overload which will automatically shut off the motor if it becomes overheated. The motor will restart when it cools down. If the motor continues to shut off and restart, have the hood serviced.
- The minimum hood distance above cooktop must not be less than 24". A maximum of 30" above cooktop is highly recommended for best capture of cooking impurities. For a gas range, the bottom of the hood MUST NOT BE LESS than 30" above cooktop.
- Two installers are recommended because of the large size and weight of this hood.
- To reduce the risk of fire and to properly exhaust air, be sure to duct air outside – Do not exhaust air into spaces within walls or ceiling or into attics, crawl space or garage.
- Because of the high exhausting capacity of this hood, you should make sure enough air is entering the house to replace exhausted air by opening a window close to or in the kitchen.
- To reduce the risk of fire and electrical shock, the Venmar Connaisseur CC700 Series models should only be installed with their own built-in blower.
- **10.** Please read specification label on product for further information and requirements.

- CC700 SERIES RANGE HOOD SYSTEM -

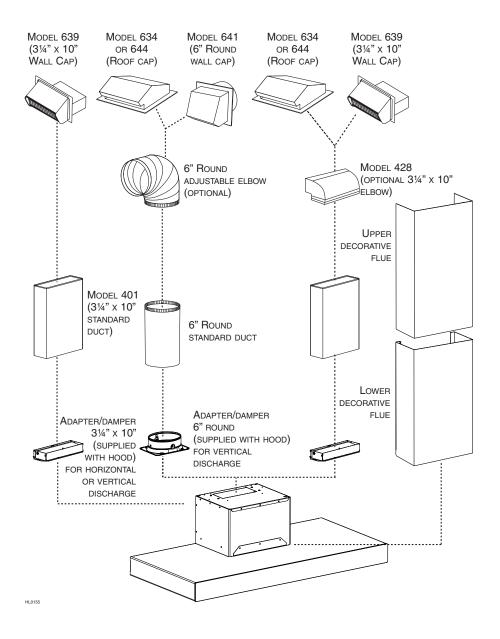


TABLE OF CONTENTS

1.	INSTALL DUCTWORK	4
2.	PREPARE THE INSTALLATION	5-6
3.	REMOVE BAFFLE FILTERS	6
4.	INSTALL GLASS PANEL (WG MODELS ONLY)	7
5.	CHOOSE THE OPENING.	
6.	BLOWER REMOVAL (HORIZONTAL DISCHARGE ONLY)	8 то 10
7.	INSTALL ADAPTER/DAMPER	10-11
8.	WIRING INSTALLATION	11-12
9.	INSTALL HOOD MOUNTING BRACKET	12
10.	INSTALL UPPER FLUE MOUNTING BRACKET	13
11.	INSTALL THE HOOD	13
12.	REINSTALL BLOWER (HORIZONTAL DISCHARGE ONLY)	14
13.	DUCT CONNECTION (VERTICAL DISCHARGE ONLY)	14
14.	PREPARE DECORATIVE FLUE	15
15.	INSTALL DECORATIVE FLUE	15-16
16.	REINSTALL BAFFLE FILTERS	16
17.	OPTIONAL UNDER CABINET INSTALLATION	17-18
18.	LIGHT BULBS	18
19.	Care	19
20.	OPERATION	19-20
21.	WIRING DIAGRAM	21
22.	WARRANTY	21
23.	SERVICE PARTS	22


1. INSTALL DUCTWORK

Plan where and how the ductwork will be installed.

A straight, short duct run will allow the hood to perform most efficiently.

Install proper-sized ductwork, elbows and roof or wall cap. Connect metal ductwork to cap and work back towards the hood location. Use 2" metal foil duct tape to seal the joints.

We recommend to install the hood at a minimum distance of 24" from an electric range and at 30" from a gas range.

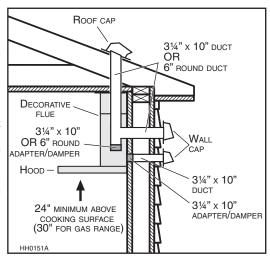

Γ	MINIMUM DISTANCE RECOMMENDED ABOVE COOKTOP/
1	MAXIMUM RECOMMENDED HEIGHT ABOVE COOKTOP

	IMAXIMUM RECOMMENDED HEIGHT ABOVE COOKTOP			
CEILING HEIGHT	8 FEET	9 FEET	10 FEET*	
ELECTRIC RANGE	24"/30"	24"/30"	24"/30"	
GAS RANGE	30"/33"	30"/36"	30"/36"	

Distances over 36" are at the installer and users discretion.

^{*10-}ft. ceilings require 10-ft. flue extension, part no. 19323 (sold separately).

⚠ WARNING

When performing installation, servicing or cleaning the unit, it is recommended to wear safety glasses and gloves.

NOTE: Before proceeding to the installation, check the contents of the box. If items are missing or damaged, contact the manufacturer.

Make sure that the following items are included:


- Hood
- Accessories Decorative flue assembly (lower and upper flues)
 - · Hood mounting bracket
 - · Upper flue mounting bracket
 - 2 Shielded halogen bulbs (120 V, 50 W, MR16 with GU10 base)
 - · 2 Baffle filters
 - 4 Filter knobs with screws (taped inside the hood)
 - 3¼" x 10" Adapter/Damper (for horizontal or vertical discharge) taped inside decorative flue
 - 6" Adapter/Damper (for vertical discharge), in a bag taped inside decorative flue
 - · Installation manual
 - Bag of parts (taped inside the hood) including:
 5 no. 8 x 1½" countersunk screws, 8 no. 8 x 3/4" screws, 2 no. 8 x 1/2" screws,
 6 no. 8 x 3/8" screws, 6 drywall anchors, 3 washers, 2 foam squares.
 If need be, discard extra parts.

Parts sold separately:

- Ducts, elbows, wall and roof caps. Refer to page 3 for a complete list of venting options and model numbers.
- Optional flue extension for 10-ft. ceilings model no. 19323.
- Glass panel for CC700I30WG and CC700I36WG models (see service parts list on page 22).


NOTE: During installation, protect countertop and/or cooktop.


Refer to illustration at right to locate duct opening for horizontal discharge.

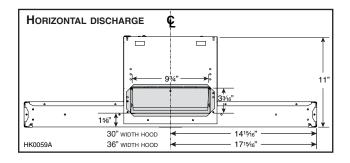

2. PREPARE THE INSTALLATION (CONT'D)


Refer to illustrations below to locate duct opening for vertical discharge.

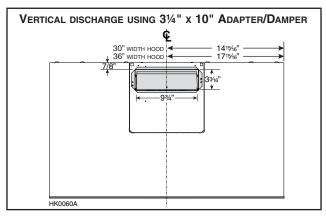

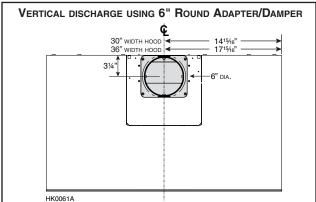

3. REMOVE BAFFLE FILTERS


Lay the back of the hood on a table. Use a piece of cardboard to avoid damaging the table or the hood. Remove tape on filters. Remove filters by pushing them towards the back and rotate, then set the filters aside.

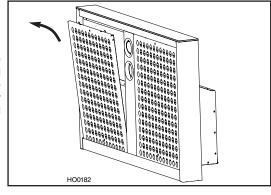


4. INSTALL GLASS PANEL (WG MODELS ONLY)

The WG hood models decorative glass panels are sold separately and have to be installed before completing the hood installation.

 Using a Robertson or a Phillips no. 2 screwdriver, remove the 4 electrical compartment cover retaining screws. Set cover and screws aside.

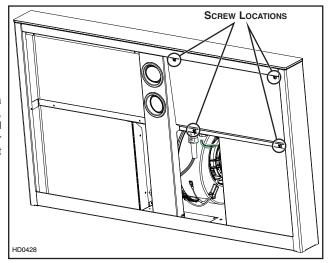

Remove glass panel from its packaging.
 Remove glass panel nuts (factory installed) from both studs and set aside.

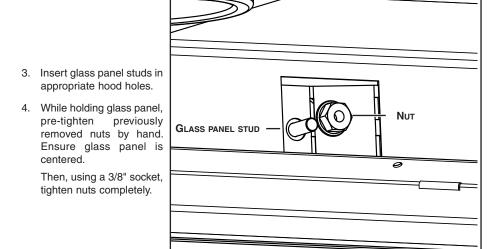


5. Reinstall electrical compartment cover.

CHOOSE THE OPENING (ALL MODELS) 5.

Turn the hood over and remove the appropriate knock-out hole according to the type of discharge chosen.

CAUTION

Never use a hammer and a screwdriver to remove the vertical or horizontal discharge knock-out, because this would damage the hood internal parts.

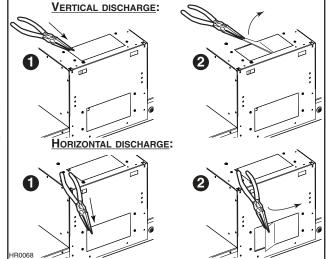


Using long nose pliers, remove the knock-out for the chosen opening (vertical on top or horizontal at the back of the hood).

See illustrations at right.

6. BLOWER REMOVAL (HORIZONTAL DISCHARGE ONLY)

The CC700 Series range hoods are factory shipped with the blower mounted for a vertical discharge configuration. For a horizontal discharge configuration, disassemble the blower from the inner top of the hood by following the steps below. It will be assembled to the inner back of the hood once the hood is mounted on the wall.


1. Using a Robertson or a Phillips no. 2 screwdriver. remove the 4 electrical cover compartment retaining screws. Set cover and screws aside.

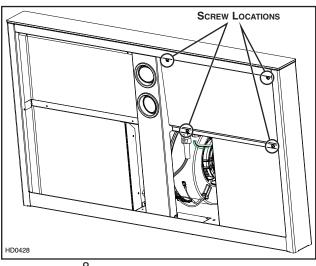

6. BLOWER REMOVAL (HORIZONTAL DISCHARGE ONLY) (CONT'D)

2. Disconnect both light assemblies electrical harnesses from light connectors.


> Using a Robertson or a Phillips no. 2 screwdriver, remove the 6 light panel retaining screws (only 3 out of 6 screws illustrated at right). Set screws aside.

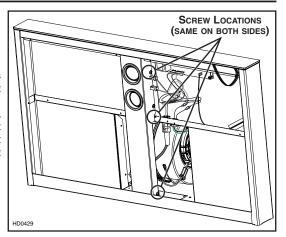


steps shown at right and set aside.

HO0191


3. Remove light panel following the 3

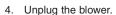


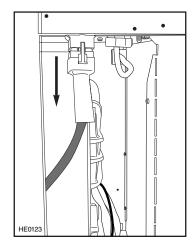

6. BLOWER REMOVAL (HORIZONTAL DISCHARGE ONLY) (CONT'D)

5. Using a 5/16" socket, or a Robertson or a Phillips no. 2 screwdriver, remove all blower mounting screws from the inner top of the hood. Set blower and screws aside.

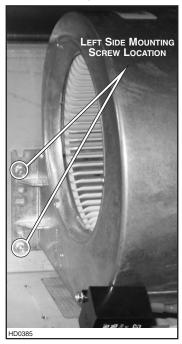


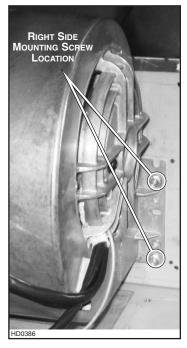

7. INSTALL ADAPTER/DAMPER

HORIZONTAL DISCHARGE

Mount the 3¼" x 10" adapter/damper to the back of the hood using 2 no. 8 x 3/8" screws (included). Seal the adapter/damper to the hood using metal foil duct tape.

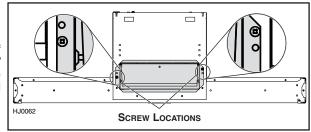


NOTE: The wall ducting must be properly prepared to receive the adapter. Before performing the installation, make sure the adapter fits easily in the duct.

INSTALL ADAPTER/DAMPER (CONT'D)


VERTICAL DISCHARGE (31/4" x 10" ADAPTER/DAMPER)

Mount the $3\frac{1}{2}$ " x 10" adapter/damper to the top of the hood using 2 no. 8 x $3\frac{1}{2}$ " screws (included). Seal the adapter/damper to the hood using metal foil duct tape.

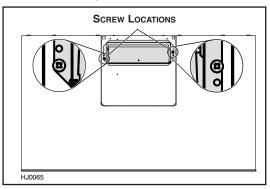

VERTICAL DISCHARGE (6" ROUND ADAPTER/DAMPER)

Mount the 6" round adapter/damper to the top of the hood using 4 no. 8 x 3/8" screws (included). Seal the adapter/damper to the hood using metal foil duct tape.

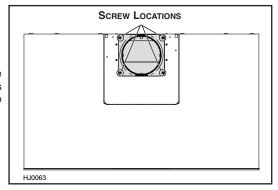

8. WIRING INSTALLATION

⚠ WARNING


Improper grounding can result in a risk of electric shock. Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. Do not use an extension cord. If the power supply cord is too short, have a qualified electrician install an outlet near the appliance, in accordance with all applicable codes and standards. Turn off electrical power at service entrance before wiring.

GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

8. WIRING INSTALLATION (CONT'D)

Position the outlet within the space covered by the decorative flue. Place the outlet at a maximum distance of 24" (from where the cord exits from the hood). The center of the outlet must be positioned at 2¾" from the center of the future hood location (as illustrated at right). Make sure this does not interfere with a mounting bracket fastening area or with the decorative flue (where the flue touches the wall).

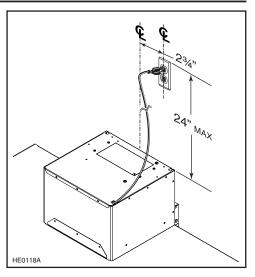

FOR UNDER CABINET INSTALLATION, GO TO SECTION 17 ON PAGES 17 AND 18.

9. INSTALL HOOD MOUNTING BRACKET

⚠ WARNING

When cutting or drilling into wall, do not damage electrical wiring and other hidden utilities.


Construct wood wall framing that is flush with surface of wall studs.

Ensure to assemble wood wall framing to wall studs for a solid installation.

Make sure the height of the framing will allow the mounting bracket to be secured to the framing within the dimensions shown (see illustration at right).

After wall surface is finished, carefully center and level the hood mounting bracket over installation location. Secure it to wall framing using 3 no. 8 x 1½" screws.


Using a level, draw a vertical line up to the ceiling starting from the mounting bracket center.

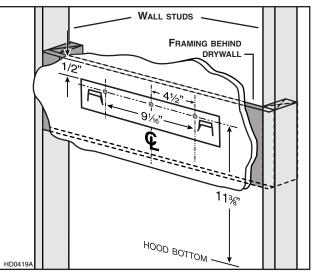

10. INSTALL UPPER FLUE MOUNTING BRACKET

Center the upper flue mounting bracket with the center line previously drawn in step 9 and place it flush with the ceiling.

Use the upper flue mounting bracket as a template to mark the position of its screws.

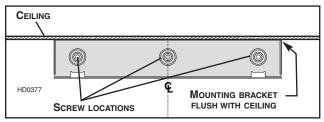

Drill the 3 screw holes using a 3/16" drill bit.

Insert the included drywall anchors into the drilled holes (1 per hole).

Secure the upper flue bracket to the wall using 3 no. 8 x 3/4" screws.

Ensure that the bracket is tight against the wall.

11. INSTALL THE HOOD

⚠ WARNING

BE CAREFUL when installing the decorative flue and hood, they may have sharp edges.


CAUTION

DO NOT REMOVE yet the protective plastic film covering the decorative flues (upper & lower).

- Align the hood and center it above the hood mounting bracket. Gently lower the hood until it securely engages the bracket.
- 2. Level the hood.
- Mark the position of both holes located inside lower back of hood (as shown at right). Also mark the position of 2 of the 6 available upper holes (one on each side). Remove the hood.

Drill through four holes using a 3/16" drill bit. Insert the included drywall anchors into both lower drilled holes.

Align the hood and center

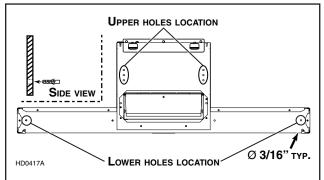

it above the hood mounting bracket. Gently lower the hood until it securely engages the bracket.

NOTE: For horizontal discharge only, make sure the adapter/damper enters the duct opening and seal joint from inside the hood using 2" metal foil duct tape.


4. Secure the hood to the wall using 4 no. 8 x 3/4" screws.

12. REINSTALL BLOWER (HORIZONTAL DISCHARGE ONLY)

1. Position the blower on the back wall discharge.

Secure the blower to the hood using a 5/16" socket, or a Robertson or a Phillips no. 2 screwdriver and the 4 previously removed screws.


NOTE: In order to ease installation, before mounting the blower, prepare the screw holes by screwing all 4 screws without the blower, then remove and mount the blower.

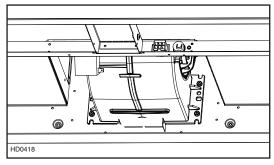

- 2. Reinstall light panel by reversing instructions of step 6.3.
- 3. Connect both light assemblies electrical harnesses to light connectors and secure light panel to hood using the 6 previously removed screws in 6.2.
- 4. Reinstall electrical compartment cover using the 4 previously removed screws in 6.1.
- 5. Plug the blower back in and plug hood power cord into the outlet.

13. DUCT CONNECTION (VERTICAL DISCHARGE ONLY)


- 1. Plug hood power cord into the outlet.
- According to the adapter/damper chosen, slide a 3¼" x 10" metal duct or a 6" round metal duct over the adapter/damper on the hood (6" round metal duct illustrated at right).
- 3. Use metal foil duct tape to seal the joint.

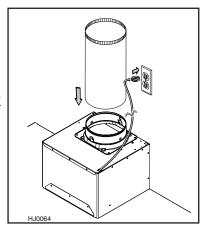

14. PREPARE DECORATIVE FLUE


- Remove protective plastic film covering the lower flue only.
- Peel off both corners at the top of the upper flue.
- 3. Position the lower flue rear notches down.
- 4. Gently slide upper flue inside lower flue.

NOTE: Both lower and upper flues are included with the hood, but for a 10 foot ceiling, discard the provided upper flue and use the optional extension flue, part no. 19323 (sold separately).

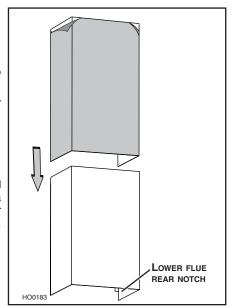


15. INSTALL DECORATIVE FLUE

 To prevent the flue from moving, affix the included foam squares on both sides near the front edge of the blower box (as illustrated at right).

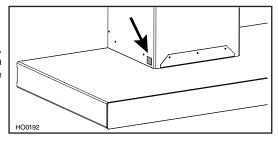


 Carefully slide in place decorative lower flue (notches end first) on top of the hood (1) until flue notches completely fit in hood slots (2).

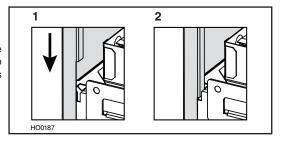

15. INSTALL DECORATIVE FLUE (CONT'D)

 Slide up the upper flue until it is aligned with its mounting bracket. The bracket must be inside the flue. Secure the upper flue to its bracket using 2 no. 8 x 1/2" screws (included). See illustration at right. NOTE: Duct not shown in illustration to ease understanding.

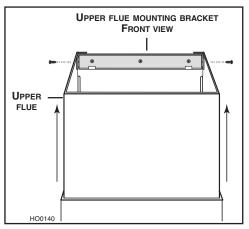

4. Remove protective plastic film covering the upper flue.


16. REINSTALL BAFFLE FILTERS

CAUTION


Remove protective plastic film covering filters before reinstalling them.

 Using a Phillips no. 2 screwdriver, assemble two knobs to each filter. The screws MUST BE on filter tabs side.

See illustration at right.

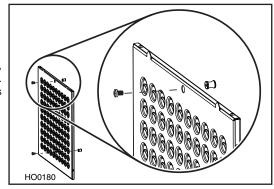


 Rest rear filters edge on filter springs in the range hood. Using knob, tilt up the filters into position. Make sure filter tabs are securely engaged in range hood front edge after installation.

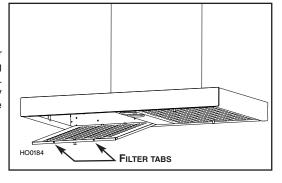

17. OPTIONAL UNDER CABINET INSTALLATION

Although this is a chimney range hood, it can also be installed under a cabinet without its chimney. Following is our recommended optional under-cabinet installation.

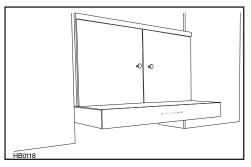

- 1. Follow steps presented in sections 1 to 8 on pages 5 to 10.
- 2. Cut-out a 11%" width x 11" depth opening in cabinet bottom.
- Drill 3 holes on each side of the blower box at approximately 1" from the sides of the hood ensuring they will be reachable from the inside of the hood.

BLOWER BOX 1/2" SCREW LOCATIONS HD0430A

CAUTION


Do not drill any holes beyond the blower box limits.

 Slide the blower box in the opening and secure the hood to the bottom of the cabinet using 6 screws.

Secure the hood to the wall by inserting a screw in 1 of the 3 available holes on each side of the blower box (1 screw on each side).


NOTES: For horizontal discharge only: Ensure the adapter/damper enters the duct opening and seal joint from inside the hood using 2" metal foil duct tape.

Reinstall blower by following step 12 on page 14.

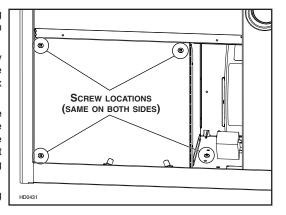

For vertical discharge only: According to the adapter/damper chosen, measure the length of 6" round or $3\frac{1}{4}$ " x 10" metal duct required from the adapter/damper to the house ductwork. Slide the duct over the adapter/damper and seal joints using 2" metal foil duct tape.

17. OPTIONAL UNDER CABINET INSTALLATION (CONT'D)

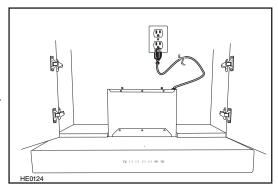

5. Plug hood power cord into the outlet.

6. Finalise the installation by following step 16 on page 16.

18. LIGHT BULBS

This range hood requires two 120 V, 50 W max., type MR16 with GU10 base, shielded halogen bulbs (included).


⚠ WARNING

Do not touch lamps during or soon after operation. Burns may occur. In order to prevent the risk of personal injury, only install shielded halogen lamps. Also, never install a cool beam, a dichroïc lamp, a lamp not suitable for use in recessed luminaires or identified for use in enclosed fixtures.

To replace bulbs:

- 1. Gently push upward and turn counterclockwise to disengage bulb leads from their grooves.
- 2. Place the new bulb leads into their grooves in the socket.
- 3. Gently push upward and turn clockwise until secured.

NOTE: If need be, use a rubber dishwashing glove to add grip when removing the bulb.

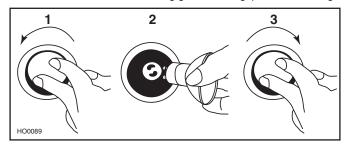

Before servicing or cleaning the unit, switch power off at service panel and lock service panel to prevent power from being switched on accidentally. When the service disconnecting means cannot be locked, securely fasten a prominent warning device, such as a tag, to the service panel.

BAFFLE FILTERS

Baffle filters should be cleaned monthly. Remove baffle filters by pushing them towards the back of hood and rotating downward. Use a warm detergent solution to clean the filters. Let them dry and reinstall them

Baffle filters are dishwasher safe. Clean all-metal filters in the dishwasher using a non-phosphate detergent. Discoloration of the filter may occur if using phosphate detergent or as a result of local water conditions — but this will not affect filter performance. This discoloration is not covered by the warranty.

INTERIOR BLOWER

Remove the filters in order to access the blower. Vacuum blower to clean. Do not immerse in water.

STAINLESS STEEL

Do:

- Regularly wash with clean cloth or rag soaked with warm water and mild soap or liquid dish detergent.
- Always clean in the direction of original polish lines.
- Always rinse well with clear water (2 or 3 times) after cleaning. Wipe dry completely.
- You may also use a specialized household stainless steel cleaner.

Don't:

- Use any steel or stainless steel wool or any other scrapers to remove stubborn dirt.
- · Use any harsh or abrasive cleansers.
- · Allow dirt to accumulate.
- Let plaster dust or any other construction residues reach the hood. During construction/renovation, cover the hood to make sure no dust sticks to stainless steel surface.

GLASS PANEL

Hot water with mild soap or glass cleaner is all that is usually needed.

When using mild soap, rinse with clear water. Wipe dry with a clean, soft cloth to avoid water marks.

Avoid when choosing a detergent:

- Any cleaners that contain bleach will attack stainless steel.
- Any products containing: chloride, fluoride, iodide, bromide will deteriorate surfaces rapidly.
- Any combustible products used for cleaning such as acetone, alcohol, ether, benzol, etc., are highly explosive and should never be used close to a range.


20. OPERATION

Always turn your blower on before you begin cooking to establish an air flow in the kitchen. Let the blower run for a few minutes to clear the air after you turn off the range.

CAUTION

After a power failure or during the range hood power up, a 5-second booting sequence is executed. Wait for the control backlighting to turn off before use.

NOTE: Due to the particular sensitivity of the control interface, keep the glass panel clean as dirt and condensation may cause erratic operation of the hood blower and/or lighting. If this situation occurs, wipe the glass panel and wait 90 seconds. Then, adjust the blower and/or lighting at your convenience.

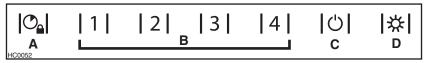

A. DELAY BUTTON/CONTROL LOCK (DOUBLE FUNCTION BUTTON):

- i. When a blower speed is selected, press this button to activate the delay function. The delay button will light to its high intensity, then to its mid intensity to indicate this function is activated; the selected blower speed button will alternate every 2 seconds from its high intensity to its mid intensity. The blower will continue to operate for 5 minutes and will stop automatically. Selecting another speed while the delay function is activated will not deactivate the function or reset the timer. To cancel the delay function, press the delay button once again or the selected speed button which last case will also turn the blower off.
- ii. When blower is off, it is possible to lock the control interface in order to clean the glass panel.

 To lock the control interface: Press and hold the button for 3 seconds. The button will light to its high intensity and flash three times, it will then stay on its mid intensity to indicate that the control interface is locked.

To unlock the control interface: Press and hold the button for 3 seconds. The button will light to its high intensity and flash 3 times, it will then fade out to its low intensity to indicate that the control interface is unlocked.

B. SPEED SELECTION BUTTONS:

Press the button corresponding to the desired blower speed (from 1 for low speed to 4 for high speed). The chosen speed button will light to its high intensity then fade to its mid intensity. To turn off the blower, press once more on the corresponding blower speed button; the button light will fade to its low intensity.

NOTE: When blower is off, pressing on blower speed 1 button will cause the blower to start on second speed for a very short lapse of time, and then resume on speed 1.

C. MASTER ON/OFF:

When blower and lights are off, press this button to turn the hood on to the last memorized speed level and light intensity. If there are no memorized speed level and light intensity, speed will be set at level 1 and light intensity at 4. To turn off the blower and the light simultaneously, press this button once.

HEAT SENTRYTM: The hood is equipped with a HEAT SENTRY thermostat. When blower is ON at any speed and excessive heat is detected above the cooking surface, it sets the blower on third speed. The third speed button backlight will blink quickly to indicate that the Heat Sentry has been activated. When the temperature level drops to normal, the blower will return to its original setting.

⚠ WARNING

The Heat Sentry can take control of the blower when excessive heat is detected above the cooking surface. If this situation occurs and you must stop the blower, press on the third speed button or on the master ON/OFF button.


D. LIGHT BUTTON/BACKLIGHTING COLOR (DOUBLE FUNCTION BUTTON):

i. This button allows four different lighting levels according to your needs. Press once for full intensity, twice for intensity level 3, three times for intensity level 2 and once more for nightlight. To turn off the lights, press once more.

If desired, when the lights are on, press and maintain the light button for 1 second; lights will be turned off and the light level in use will be memorized.

NOTE: When only lights are ON to any intensity and no interaction with the hood is detected for a 10-second period, the 7 buttons backlighting will fade to its low intensity, acting as a night light feature.

ii. When lights are off, pressing and holding this button for 2 seconds will switch the backlighting color from white to blue or from blue to white (default backlighting color is white) and memorize it. The button will flash three times to indicate that the color change has been made.

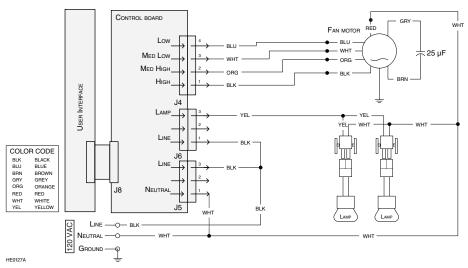

22. WARRANTY

VENMAR VENTILATION FIVE-YEAR WARRANTY

Venmar Ventilation Inc. warrants to the original consumer purchaser of the Venmar Connaisseur CC700 Series range hood that such product will be free from defects in materials or workmanship for a period of five (5) years from date of original purchase. This warranty includes in-home service for the first year and workshop service for the four (4) remaining years.

THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. VENMAR VENTILATION INC. WILL NOT BE HELD RESPONSIBLE FOR ANY CLAIMS OVER THE ORIGINAL PURCHASE PRICE OF A VENMAR CONNAISSEUR CC700 SERIES RANGE HOOD NOR HELD RESPONSIBLE FOR SUBSEQUENT DAMAGE OR INCIDENT.

During the period stated above, Venmar Ventilation Inc. will, at its option, repair or replace without charge any product or part which is found to be defective under normal use and service. THIS WARRANTY DOES NOT EXTEND TO ANY LIGHT BULBS AND FILTERS.

This warranty does not cover a) normal maintenance and service b) any products or parts which have been subject to misuse, negligence, accident, improper maintenance or repairs made by other than Venmar Ventilation Inc., or c) a faulty installation or installation contrary to recommended installation instructions.

Warranty service is to be completed by an authorized Service Center designated by Venmar Ventilation Inc. Where applicable, in-home service will be made available only in areas where a contracted service provider offers service. If in-home service is not available, the product will be repaired or replaced, at Venmar's discretion, by the nearest authorized service provider. The unit removal and reinstallation works are under the customer responsibility, and Venmar cannot be charged for them.

The duration of any implied warranty is limited to the 5-year period as specified for the express warranty. Some provinces do not allow limitation on how long an implied warranty lasts, so the above limitation may not apply to you. VENMAR VENTILATION INC'S OBLIGATION TO REPAIR OR REPLACE AT VENMAR VENTILATION INC'S OPTION, SHALL BE THE PURCHASER'S SOLE AND EXCLUSIVE REMEDY UNDER THIS WARRANTY. VENMAR VENTILATION INC SHALL NOT BE LIABLE FOR INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES ARISING OUT OF OR IN CONNECTION WITH PRODUCT USE OR PERFORMANCE. SOME PROVINCES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights and you may also have other rights, which vary from province to another. This warranty supersedes all prior warranties.


To contact Venmar Ventilation Inc. warranty service call 1-800-567-3855 in Canada. In order to qualify for a warranty claim, the owner of a Venmar Connaisseur CC700 Series range hood must have the model and serial number along with a proof of the original purchase date. At the time of requesting service, describe the nature of any defect in the product or part.

Venmar Ventilation Inc., 550 Lemire Blvd., Drummondville, QC J2C 7W9 (1-800-567-3855)

www.venmar.ca www.ispira.ca

23. SERVICE PARTS

-

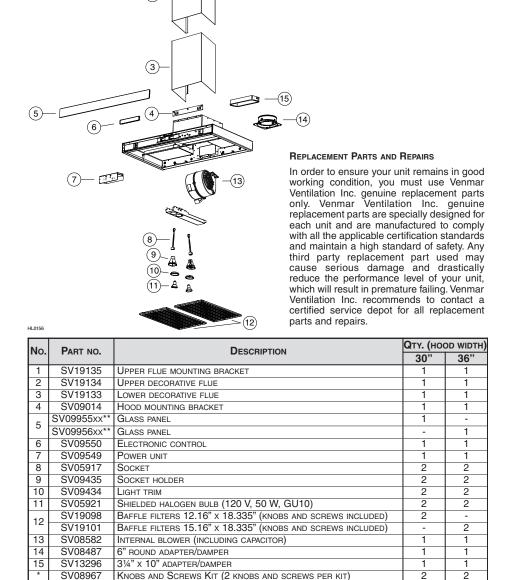

SV09628

SV09027

INSTALLATION GUIDE

8 NO. 8 x 3/4" SCREWS, 2 NO. 8 x 1/2" SCREWS, 6 NO. 8 x 3/8" SCREWS,

PARTS BAG: 5 NO. 8 x 11/2" COUNTERSUNK SCREWS,

6 DRYWALL ANCHORS, 3 WASHERS, 2 FOAM SQUARES.

1

1

1

1

^{*}Not shown.

^{**}PART NUMBER ACCORDING TO GLASS PANEL COLOR.